




Recessed Installation with spring


1. Necessary accessories:



2. Fix PWB3*6 screw on backboard of panel light as shown below.

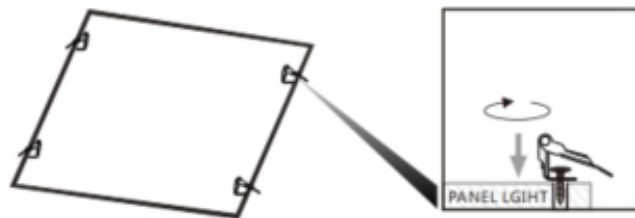

3. Wiring driver and all other necessary accessories Fix the panel light into right place with spring

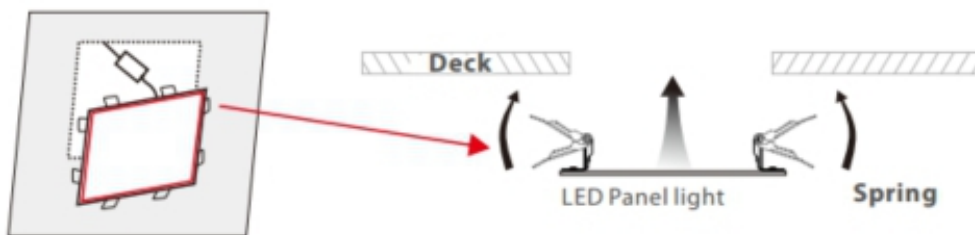

4. Power on

